

Inspection and Testing Pocket Notes

Type of test	Initial Verification	Periodic Inspection
Purpose of test	<ol style="list-style-type: none"> 1. All equipment is correct type and complies with relevant British Standard 2. All parts of Installation are correctly selected and erected 3. No part of installation visibly damaged or otherwise defective 	<ol style="list-style-type: none"> 1. Safety of persons and livestock against of electric shock 2. Protection against damage to property by fire or heat from installation defect 3. Installation is not damaged or deteriorated so as to impair safety 4. Identify installation defects and non compliance with regs which may give rise to danger
Information required by inspector	<ol style="list-style-type: none"> 1. Maximum demand 2. Number and type of live conductors 3. Earthing arrangements 4. Nominal voltage 5. Nature of current and frequency 6. Prospective fault current 7. External earth fault loop impedance 8. Suitability for the requirements of insulation 9. Type/rating of incoming protective device <p>Diagrams, charts and tables should be available and contain:</p> <ol style="list-style-type: none"> 1. Type, composition, utilisation, size of conductor and type of cable for each circuit 2. Methods of basic and fault protection 3. Identification of devices for protection, isolation and switching 4. Details of equipment vulnerable to test 	<ol style="list-style-type: none"> 1. Extent of installation to be inspected 2. Criteria regarding limitation of inspection 3. Enquires to be made with regard to provision or diagrams, supply and earthing arrangements 4. Diagrams to indicate composition of circuits identification of protective devices, isolation and switching and methods of basic and fault protection <p>If the information available is limited it may be necessary to carry out certain</p>

Tests

The methods described below only serve as notes. Electrical tests must only be done by a fully qualified and competent electrician! SparkyFacts.co.uk does not accept any responsibility or liability for potential damages or injury to people or livestock.

Before tests SAFE ISOLATION MUST BE DONE!!!

The point of isolation must be locked off and a warning notice must be in place!

Test	Instrument	Method	Value												
Continuity of CPC and bonding conductors	Low reading ohm meter	1.Link cpc to line at c/u and measure at socket (this gives polarity as well) 2.Use long leads for measuring bonding; one end disconnected to avoid parallel paths. items to be bonded: water main, gas main, oil supply pipe, LPG supply ppe, structural steel work, central heating, air conditioning, lightning conductor, kitchen sinks.	1. The highest reading is the R1+R2 2. R2 – should not read above 0.05 ohm <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th colspan="2">Max length cooper before 0.05ohm is exceeded</th> </tr> <tr> <th>Mm2</th> <th>metres</th> </tr> </thead> <tbody> <tr> <td>10</td> <td>27</td> </tr> <tr> <td>16</td> <td>43</td> </tr> <tr> <td>25</td> <td>68</td> </tr> <tr> <td>35</td> <td>95</td> </tr> </tbody> </table>	Max length cooper before 0.05ohm is exceeded		Mm2	metres	10	27	16	43	25	68	35	95
Max length cooper before 0.05ohm is exceeded															
Mm2	metres														
10	27														
16	43														
25	68														
35	95														
Supplementary bonding test	Low reading ohm meter	Probe of one lead on one metal part and probe of the other lead on the adjacent metal part. This measured value must be less then the calculated one. If it is more than we must place the supplementary bonding to make sure it is less.	Calculation: for the required disconnection time take the Zs and than $I_a = \frac{U_o}{Z_s}$; than $R = \frac{50V}{I_a}$. If the measurement is higher then this calculated one, than there is a need for supplementary bonding. Zs varies for different protective devices and disconnection times.												
Ring circuit continuity test (polarity as well)	Low reading Ω meter	1.Test open ends live-live, neutral-neutral,cpc-cpc 2.Cros connect line to neutral and measure line to neutral at each socket 3.Cros connect line to cpc and test line to cpc at each socket	1. record results 2. Reading should be approx $\frac{1}{2}$ of previous reading or $(r1+rn)/4$ 3. Reading should be approximately $\frac{1}{4}$ of line to line + $\frac{1}{4}$ of cpc to cpc or $(r1+r2)/4$												

Insulation resistance test	Insulation resistance tester – high reading Ω meter	Isolate circuit! Lamps and equipment removed!! Main switch, MCB's and all switches on. Test at the DB on the incoming side of the main switch. Test L-CPC, N-CPC, L-N, or where equipment is vulnerable test between LN together and CPC. For 3 phase test between all L conductors, then between all L and N, then between all L and CPC, then between N and CPC.	SELV and PELV 250V min 0.5 Mohm ; LV 500V min 1 Mohm Values lower than 2Mohm needs further investigation ; circuits must be tested separately.						
Polarity dead	Low reading Ω meter	1.Link line and cpc at c/u 2. Neutral with long lead	1. R1+R2 2. Rn						
Polarity live	Volt meter	Live test! At the incoming side of the main switch. 1.Line to neutral 2.Line to earth 3.Neutral to earth	1. 230V 2. 230V 3. 0V						
Loop tests – Ze, Zs and earth electrode	Earth Loop Impedance tester – low reading in Ω	WARNING – NEVER test between Line and Line (400V)!!!!!! Ze – LIVE TEST!!! Supply on, but the installation isolated! The earthing conductor disconnected. Test at the incoming (live) side of the main switch and the supply earth. Green lead to incoming earth. Test between N and L. For 3phase test between N-L1, N-L2, N-L3. The highest reading is the Ze. Zs – The whole installation energised!! Measure at all sockets and outlets with either using three leads or socket plug. The highest value is the Zs. For 3 phase measure with green on earth, black on neutral and red on L1, then red on L2 then red on L3. The highest is Zs. If Zs test trips the RCD then we can use the “no trip” function of the tester if we have one, or we can calculate the Zs. Earth electrode test – 1. With proprietary tester and two other electrodes. All three electrodes connected to the tester.	Ze – low reading ohm Zs – low reading ohm						
			max <u>measured</u> Zs for Type B MCB's (by rule of thumb)						
			3 A	6 A	10 A	16 A	20 A	25 A	32 A
			11.6 Ω	5.82 Ω	3.49 Ω	2.18 Ω	1.74 Ω	1.39 Ω	1.08 Ω
			Earth electrode- max 200 ohm in practice						

		2. With earth loop impedance tester the same way as Ze.																					
Earth fault current and short circuit current	Prospective fault current tester	<p>We measure these values at the same time every time when measure Ze. Live test!!! Supply on, but the installation isolated! Test on the incoming side of the main switch.</p> <p>Earth fault current – green lead to earth. Test between N-L. For 3phase test between N-L1 , N-L2 , N-L3. The highest value is the earth fault current.</p> <p>Short circuit current – Green on neutral as well. Test between N-L. For 3phase test between N-L1 , N-L2 , N-L3. The highest value is the short circuit current.</p> <p>PFC to enter on documentations – whichever is the higher of the two determined test values on single phase. For 3phase double the highest measured Line to Neutral value to get the PFC.</p>	<p>High value in Amps. The protective device must be able to clear this value For single phase the higher value of the two tests should be recorded on the test certificate. For 3 phase take the highest value between Line and Neutral and double it, this should be recorded.</p> <p>On TNCS systems we can calculate by: $PSCC = \frac{230v}{Z_e} = A$</p> <table border="1"> <thead> <tr> <th>Examples</th> <th>PSCC</th> </tr> </thead> <tbody> <tr> <td>Semi-enclosed BS 3036</td> <td>1kA to 4kA depending on type</td> </tr> <tr> <td>BS1361 Type 1</td> <td>16.5 kA</td> </tr> <tr> <td>BS 1361 Type 2</td> <td>33 kA</td> </tr> <tr> <td>BS 88-2.1</td> <td>50 kA at 415V</td> </tr> <tr> <td>BS 88-6</td> <td>16.5 kA at 240V 80 kA at 415V</td> </tr> </tbody> </table>	Examples	PSCC	Semi-enclosed BS 3036	1kA to 4kA depending on type	BS1361 Type 1	16.5 kA	BS 1361 Type 2	33 kA	BS 88-2.1	50 kA at 415V	BS 88-6	16.5 kA at 240V 80 kA at 415V								
Examples	PSCC																						
Semi-enclosed BS 3036	1kA to 4kA depending on type																						
BS1361 Type 1	16.5 kA																						
BS 1361 Type 2	33 kA																						
BS 88-2.1	50 kA at 415V																						
BS 88-6	16.5 kA at 240V 80 kA at 415V																						
RCD and other functional tests	RCD tester	<p>LIVE test!!! Test with 50%, 100% and when RCD is a supplementary protection then 500% as well. Test by plugging in the tester to a RCD protected socket and test both side of an AC wave for max 2 sec. After the tests manually test by pushing the test button on the RCD.</p>	<table border="1"> <thead> <tr> <th colspan="4">Max trip time</th> </tr> <tr> <th>Test current</th> <th>BS 4293</th> <th>BSEN 61008</th> <th>BSEN 61009</th> </tr> </thead> <tbody> <tr> <td>50% In</td> <td>No trip</td> <td>No trip</td> <td>No trip</td> </tr> <tr> <td>100% In</td> <td>200ms</td> <td>300ms</td> <td>300ms</td> </tr> <tr> <td>500% In</td> <td>40ms</td> <td>40ms</td> <td>40ms</td> </tr> </tbody> </table>	Max trip time				Test current	BS 4293	BSEN 61008	BSEN 61009	50% In	No trip	No trip	No trip	100% In	200ms	300ms	300ms	500% In	40ms	40ms	40ms
Max trip time																							
Test current	BS 4293	BSEN 61008	BSEN 61009																				
50% In	No trip	No trip	No trip																				
100% In	200ms	300ms	300ms																				
500% In	40ms	40ms	40ms																				

After these tests all switches, isolators, thermostats and circuit breakers should be checked to work properly.

Verifying Zs results

Accepted methods of verifying Zs:

- values in Appendix B of GN3 or Appendix 2 OSG
- the rule of thumb with Table 41.2 , 41.3 , 41.4 – 80% of the tabulated value

Rated current (A)	Circuit-breakers to BS 3871 or BS EN 60898 or RCBO`s to BS EN 61009					
	Type 1	Type 2	Type B	Type 3 and C	Type D	
	0.4 sec to 5 sec				0.4 s	5 s
3	N/A	N/A	11.64	N/A	N/A	N/A
5	8.73	4.99	N/A	3.49	1.74	3.49
6	7.28	4.16	5.82	2.91	1.45	2.91
10	4.36	2.49	3.49	1.74	0.87	1.74
15	2.91	1.66	N/A	1.16	0.57	1.16
16	2.72	1.56	2.18	1.08	0.54	1.08
20	2.18	1.24	1.74	0.87	0.43	0.87
25	1.74	0.99	1.39	0.69	0.34	0.69
30	1.45	0.83	N/A	0.57	0.28	0.57
32	1.36	0.77	1.08	0.54	0.27	0.54
40	1.08	0.62	0.87	0.43	0.21	0.43
45	0.96	0.55	0.77	0.38	0.19	0.38
50	0.87	0.49	0.69	0.34	0.16	0.34
63	0.68	0.39	0.55	0.27	0.13	0.27

Voltage drop

It is part of the inspection process.

1. Method – measure the voltage at the origin of the circuit, and then measure the voltage at the end of the circuit with load connected and switched on.
2. Method – Insulation resistance test between the phase and neutral. The measured resistance should be multiplied by the current that will flow in the circuit. This gives the voltage drop.

Determining if a part is extraneous or just a piece of metal

A test should be made using an insulation resistance tester set on Mohm supplying 500V. Connect one test lead to the metal part and the other lead to a known earth. If the measured value is >0.02 Mohm then there is no need for supplementary bonding if less than supplementary bonding should be carried out.

Verification of ring test results

L1-N2 & L2-N1 L-N Readings	L1-CPC2 & L2-CPC1 L-CPC Readings	Suspected faults
0.5	0.68	OK
0.51	0.92	Bad joint on CPC
0.49	o/c	No connection on CPC or L-N reversed
0.62	0.74	Spur or bad joints
o/c	o/c	No connection on L or N-CPC reversed
0.7	0.67	Bad joint on N
0.5	0.68	OK
0.15	0.15	OK
0.15	0.41	Bad joint on CPC
o/c	0.15	No connection on N or L-CPC reversed
0.43	0.42	Spur or bad joint on L
0.15	0.15	OK
o/c	o/c	No connection on L or N-CPC reversed
0.43	0.15	Bad joint on N
0.15	o/c	No connection on CPC or L-N reversed
0.4	0.4	OK
o/c	0.39	No connection on N or L-CPC reversed
0.5	0.4	Bad joint on N
0.4	o/c	No connection on CPC or L-N reversed
0.41	0.41	OK

Recommended frequency of inspection and testing

Type of installation	Routine check sub-clause 3.5	Maximum period between inspections and testing as necessary	Reference (see key below)
1	2	3	4
Domestic	-	Change of occupancy/10 years	
Commercial	1 year	Change of occupancy/5 years	1, 2
Educational establishments	4 months	5 years	1, 2
Hospitals	1 year	5 years	1, 2
Industrial	1 year	3 years	1, 2
Residential accommodation	at change of occupancy/1 year	5 years	1
Offices	1 year	5 years	1, 2
Shops	1 year	5 years	1, 2
Laboratories	1 year	5 years	1, 2
Cinemas	1 year	1 to 3 years	2, 6, 7
Church installations	1 year	5 years	2
Leisure complexes (excluding swimming pools)	1 year	3 years	1, 2, 6
Places of public entertainment	1 year	3 years	1, 2, 6
Restaurants and hotels	1 year	5 years	1, 2, 6
Theatres	1 year	3 years	2, 6, 7
Public houses	1 year	5 years	1, 2, 6
Village halls/community centres	1 year	5 years	1, 2
Agricultural and horticultural	1 year	3 years	1, 2
Caravans	1 year	3 years	8
Caravan parks	6 months	1 year	1, 2, 6
Highway power supplies	as convenient	6 years	
Marinas	4 months	1 year	1, 2
Fish farms	4 months	1 year	1, 2
Swimming pools	4 months	1 year	1, 2, 6
Emergency lighting	Daily/monthly	3 years	2, 3, 4
Fire alarms	Daily/weekly/monthly	1 year	2, 4, 5
Laundrettes	1 year	1 year	1, 2, 6
Petrol filling stations	1 year	1 year	1, 2, 6
Construction site installations	3 months	3 months	1, 2

▼ **Table 3.2**
Recommended initial frequencies of inspection of electrical installations

Reference key

- Particular attention must be taken to comply with SI 1988 No. 1057 – Electricity, Safety, Quality and Continuity Regulations 2002 (as amended).
- SI 1989 No. 635 – Electricity at Work Regulations 1989 (Regulation 4 & Memorandum).
- See BS 5266: Part 1: 2005 *Code of practice for the emergency lighting of premises other than cinemas and certain other specified premises used for entertainment.*
- Other intervals are recommended for testing operation of batteries and generators.
- See BS 5839: Part 1: 2002 *Code of practice for system design installation and servicing (Fire detection and alarm systems for buildings).*